


Frieri

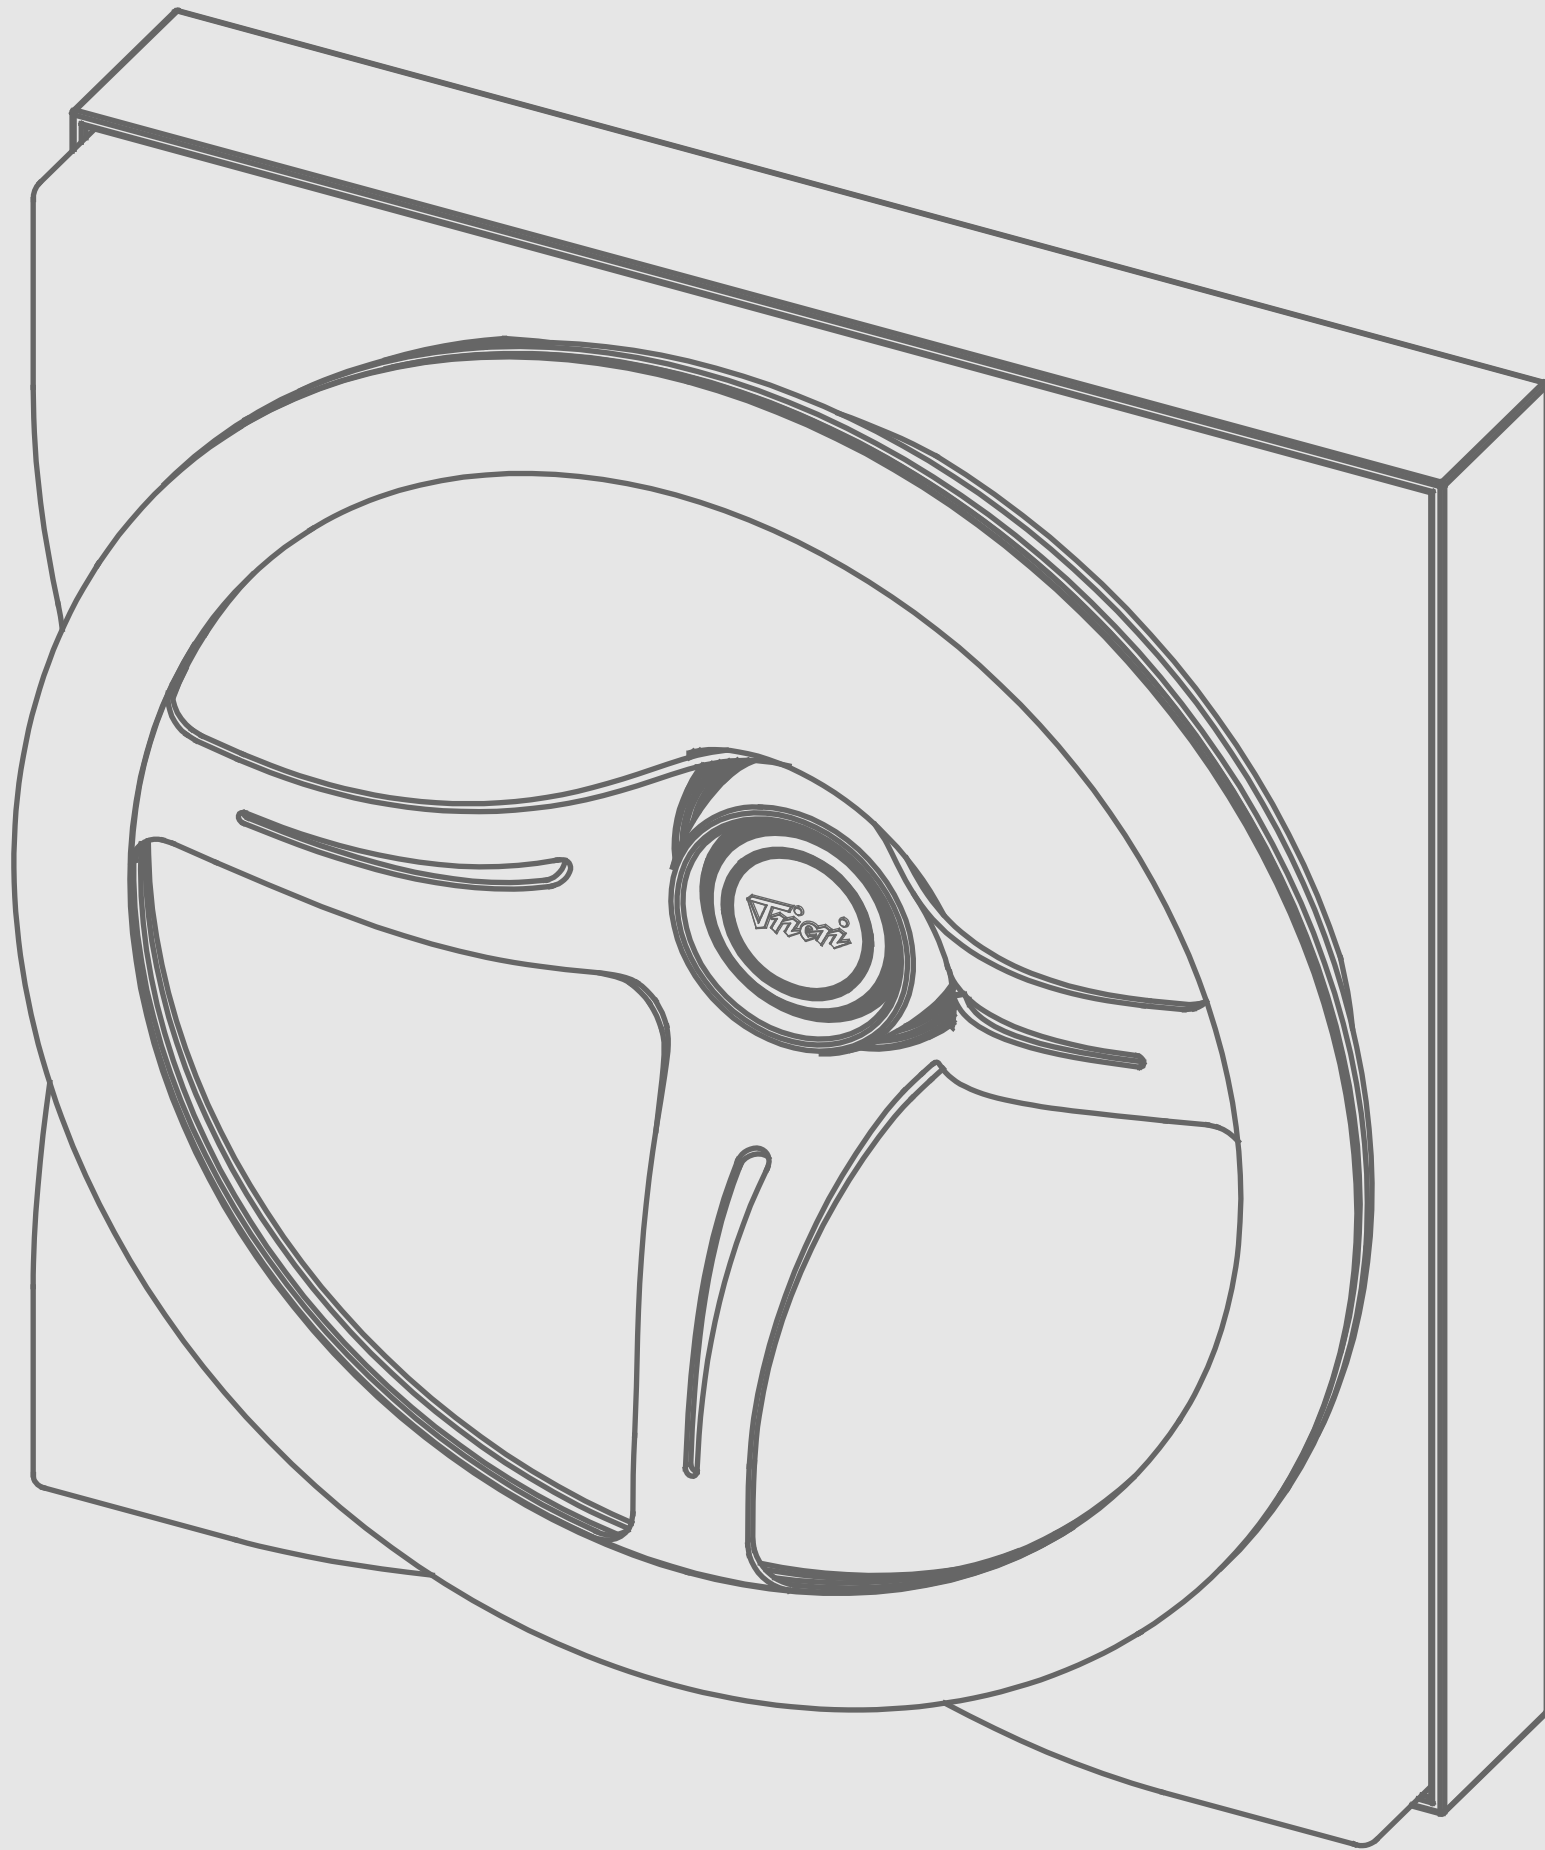

**STEERING WHEEL
USER MANUAL**


Trieri



STEP #1

First, take your innovative design Trieri steering wheel out of the box.


Frieri

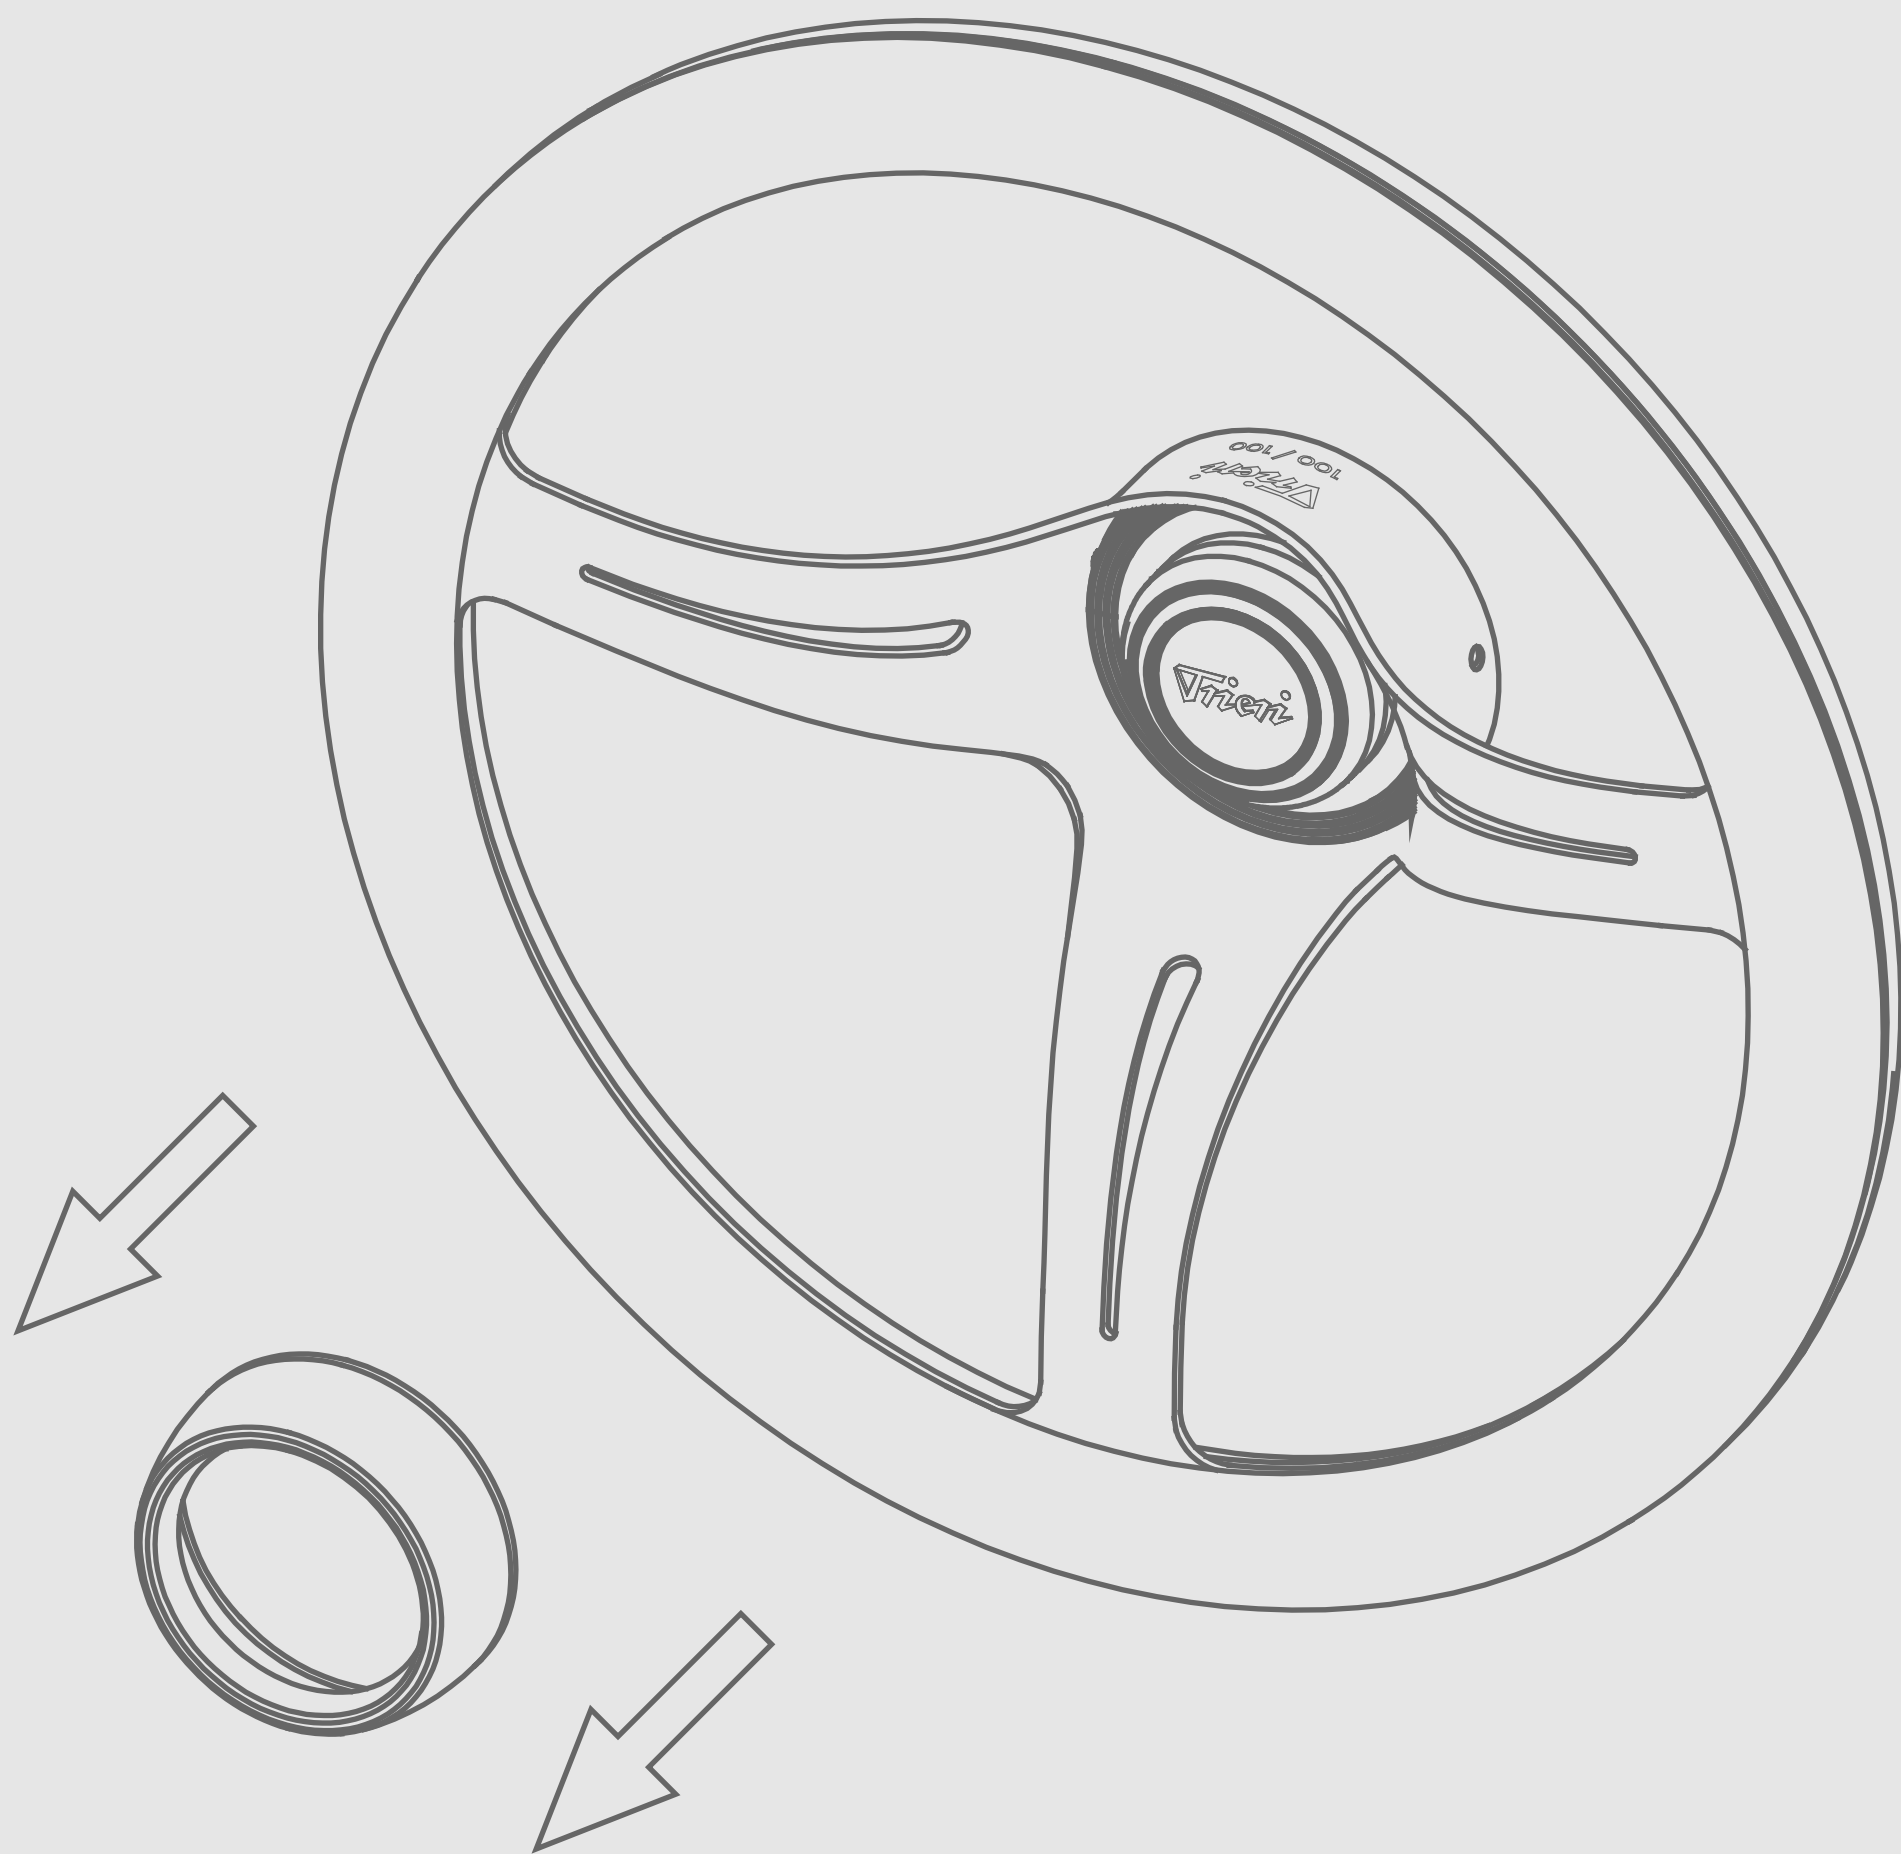

STEP #2

Pull the center metal ring out of the horn button assembly towards you.


Vieri

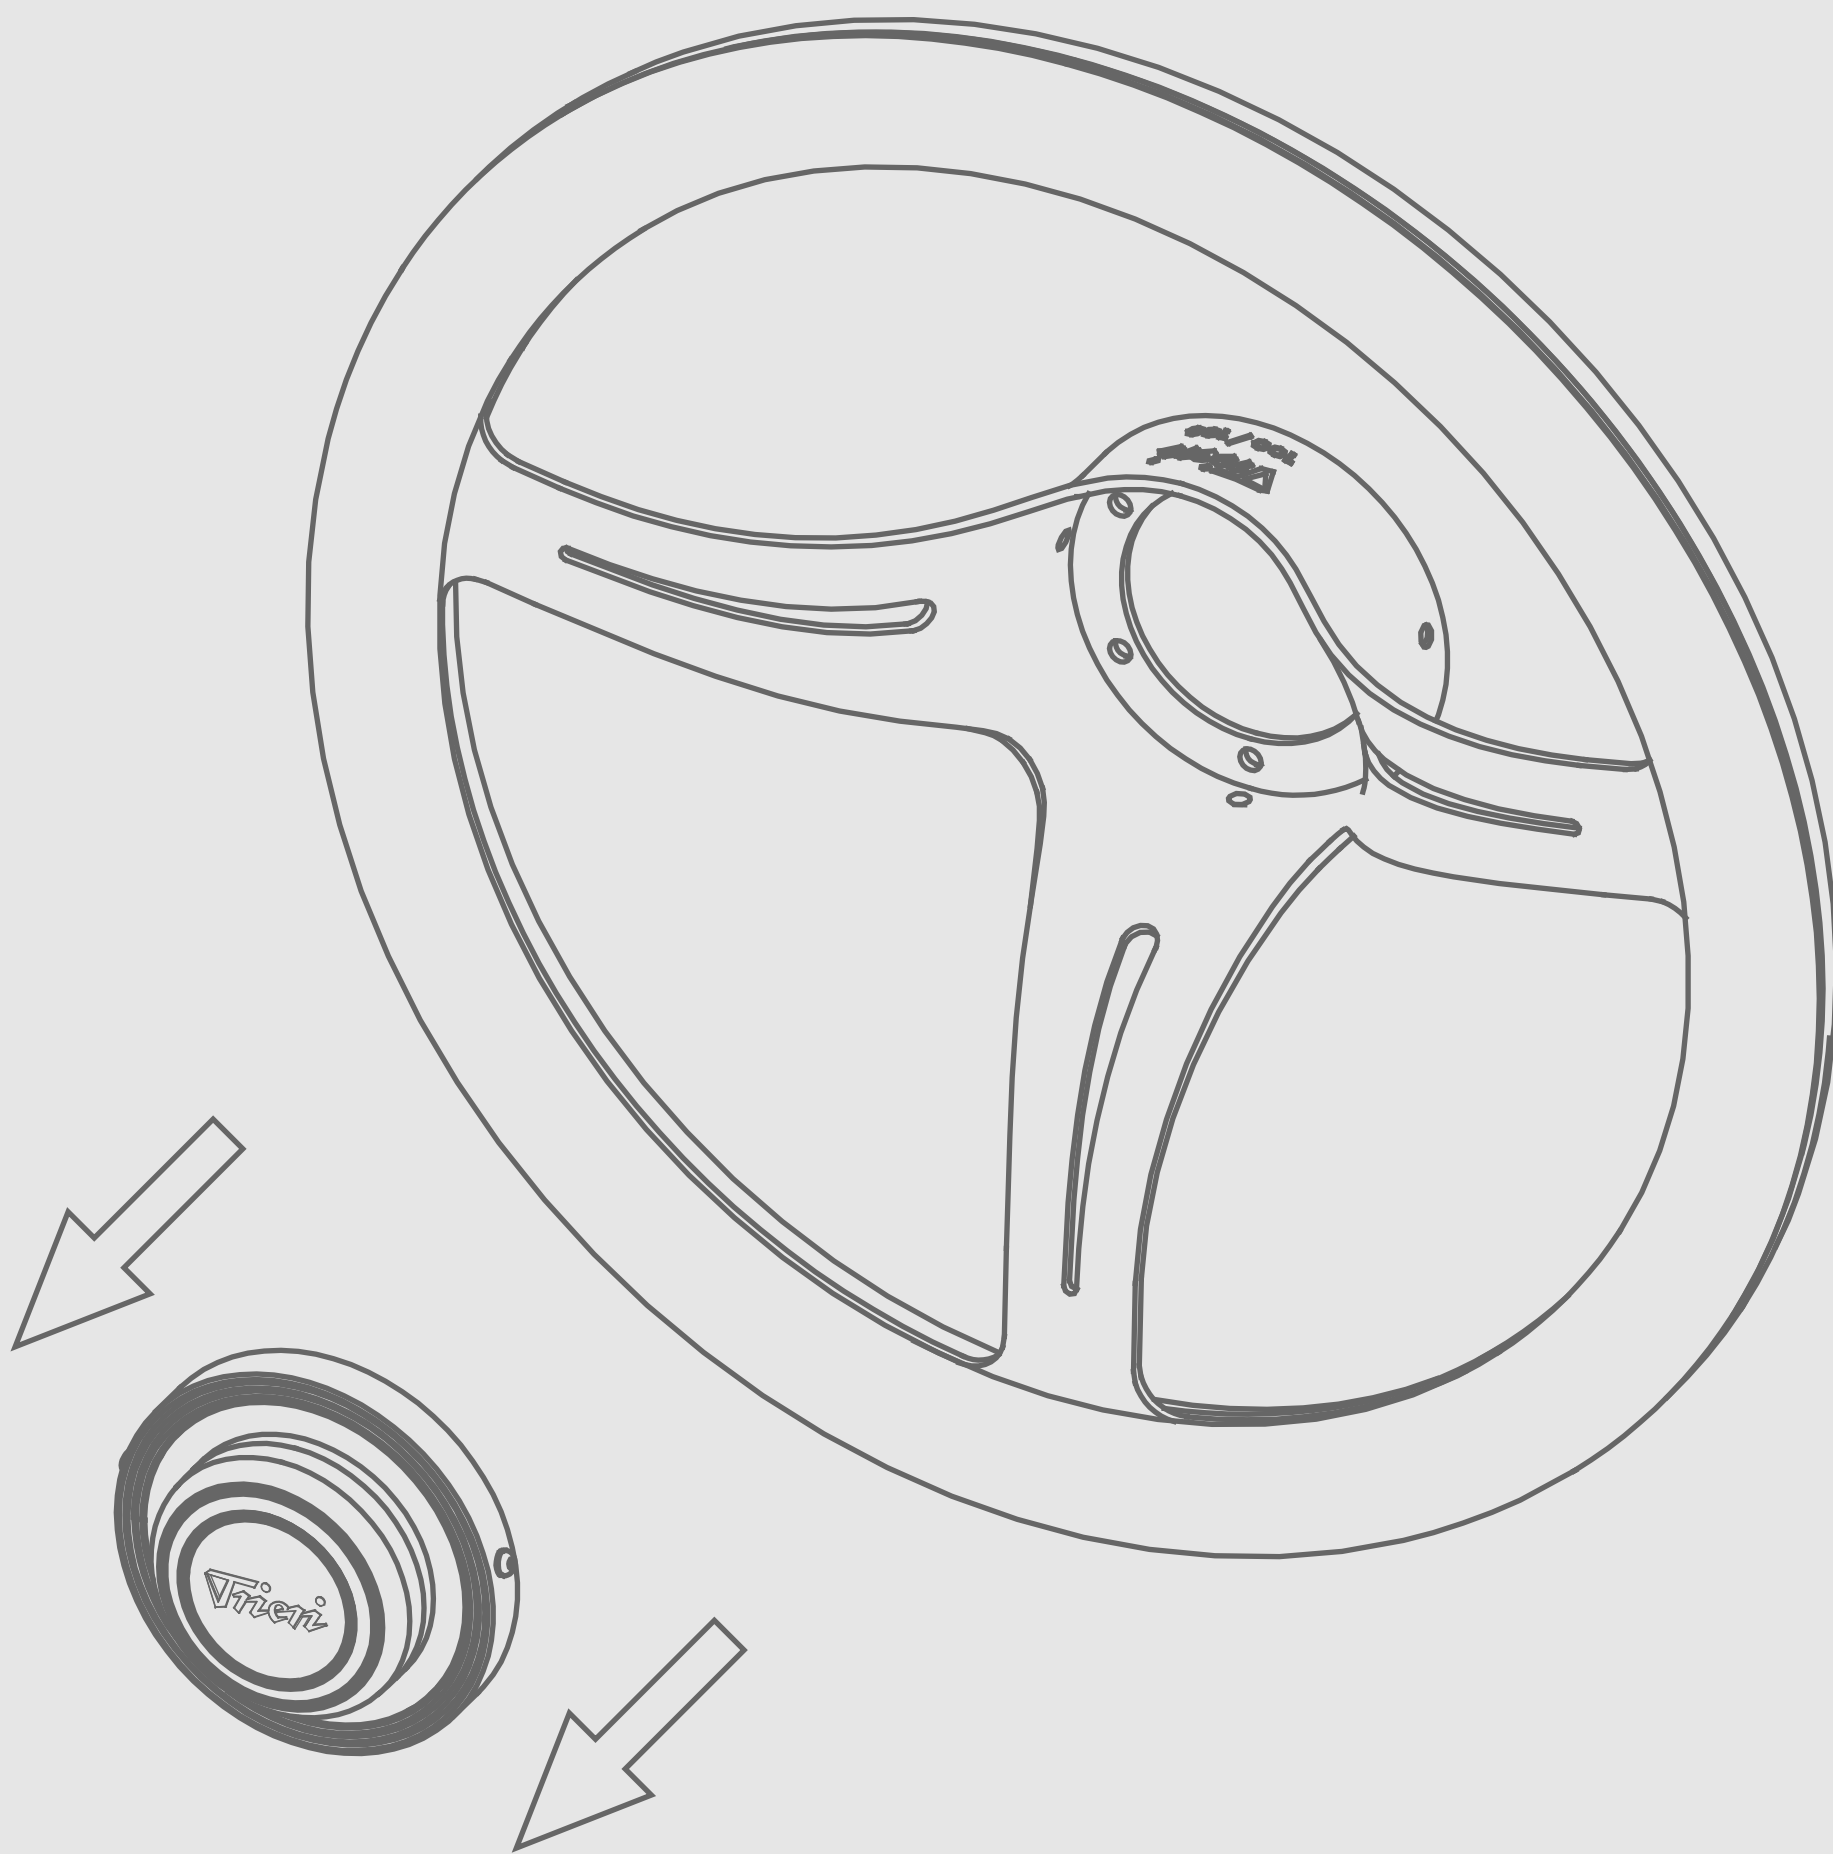

STEP #3

Pull the rest of the horn button assembly out from the steering wheel.


Frieri

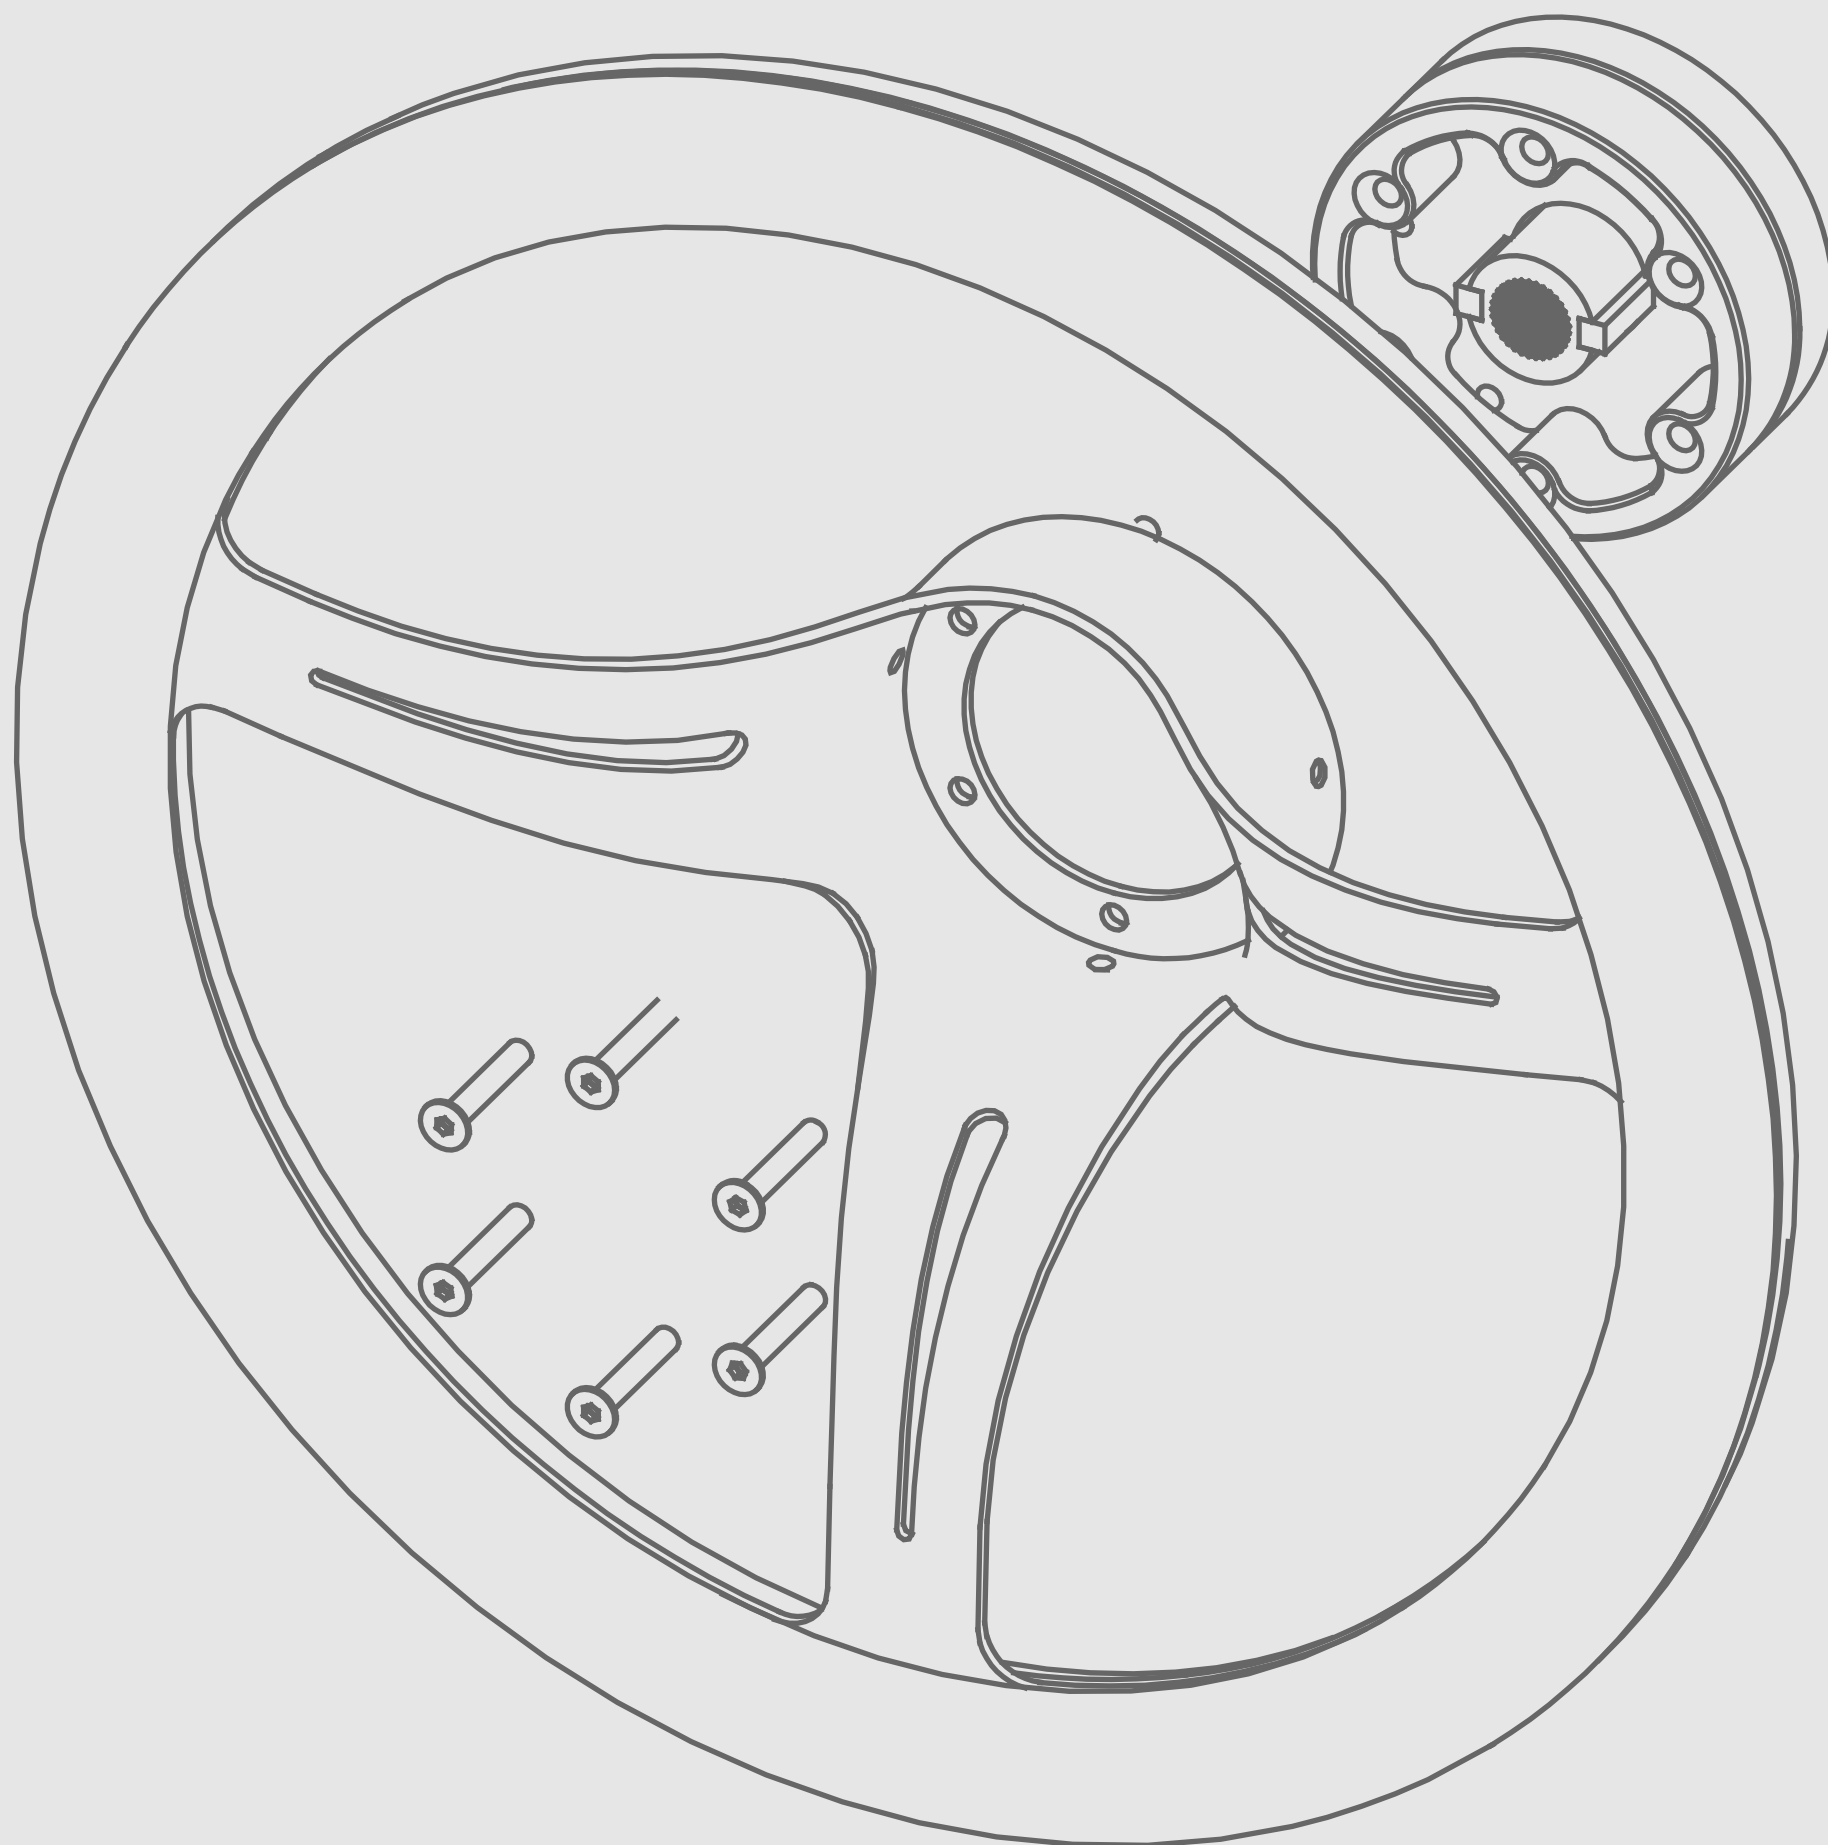

STEP #4

Align your steering wheel with the standard 6 x 70mm bolt pattern steering wheel adapter for your vehicle, and tight it down with provided m5 screws.


Trieri

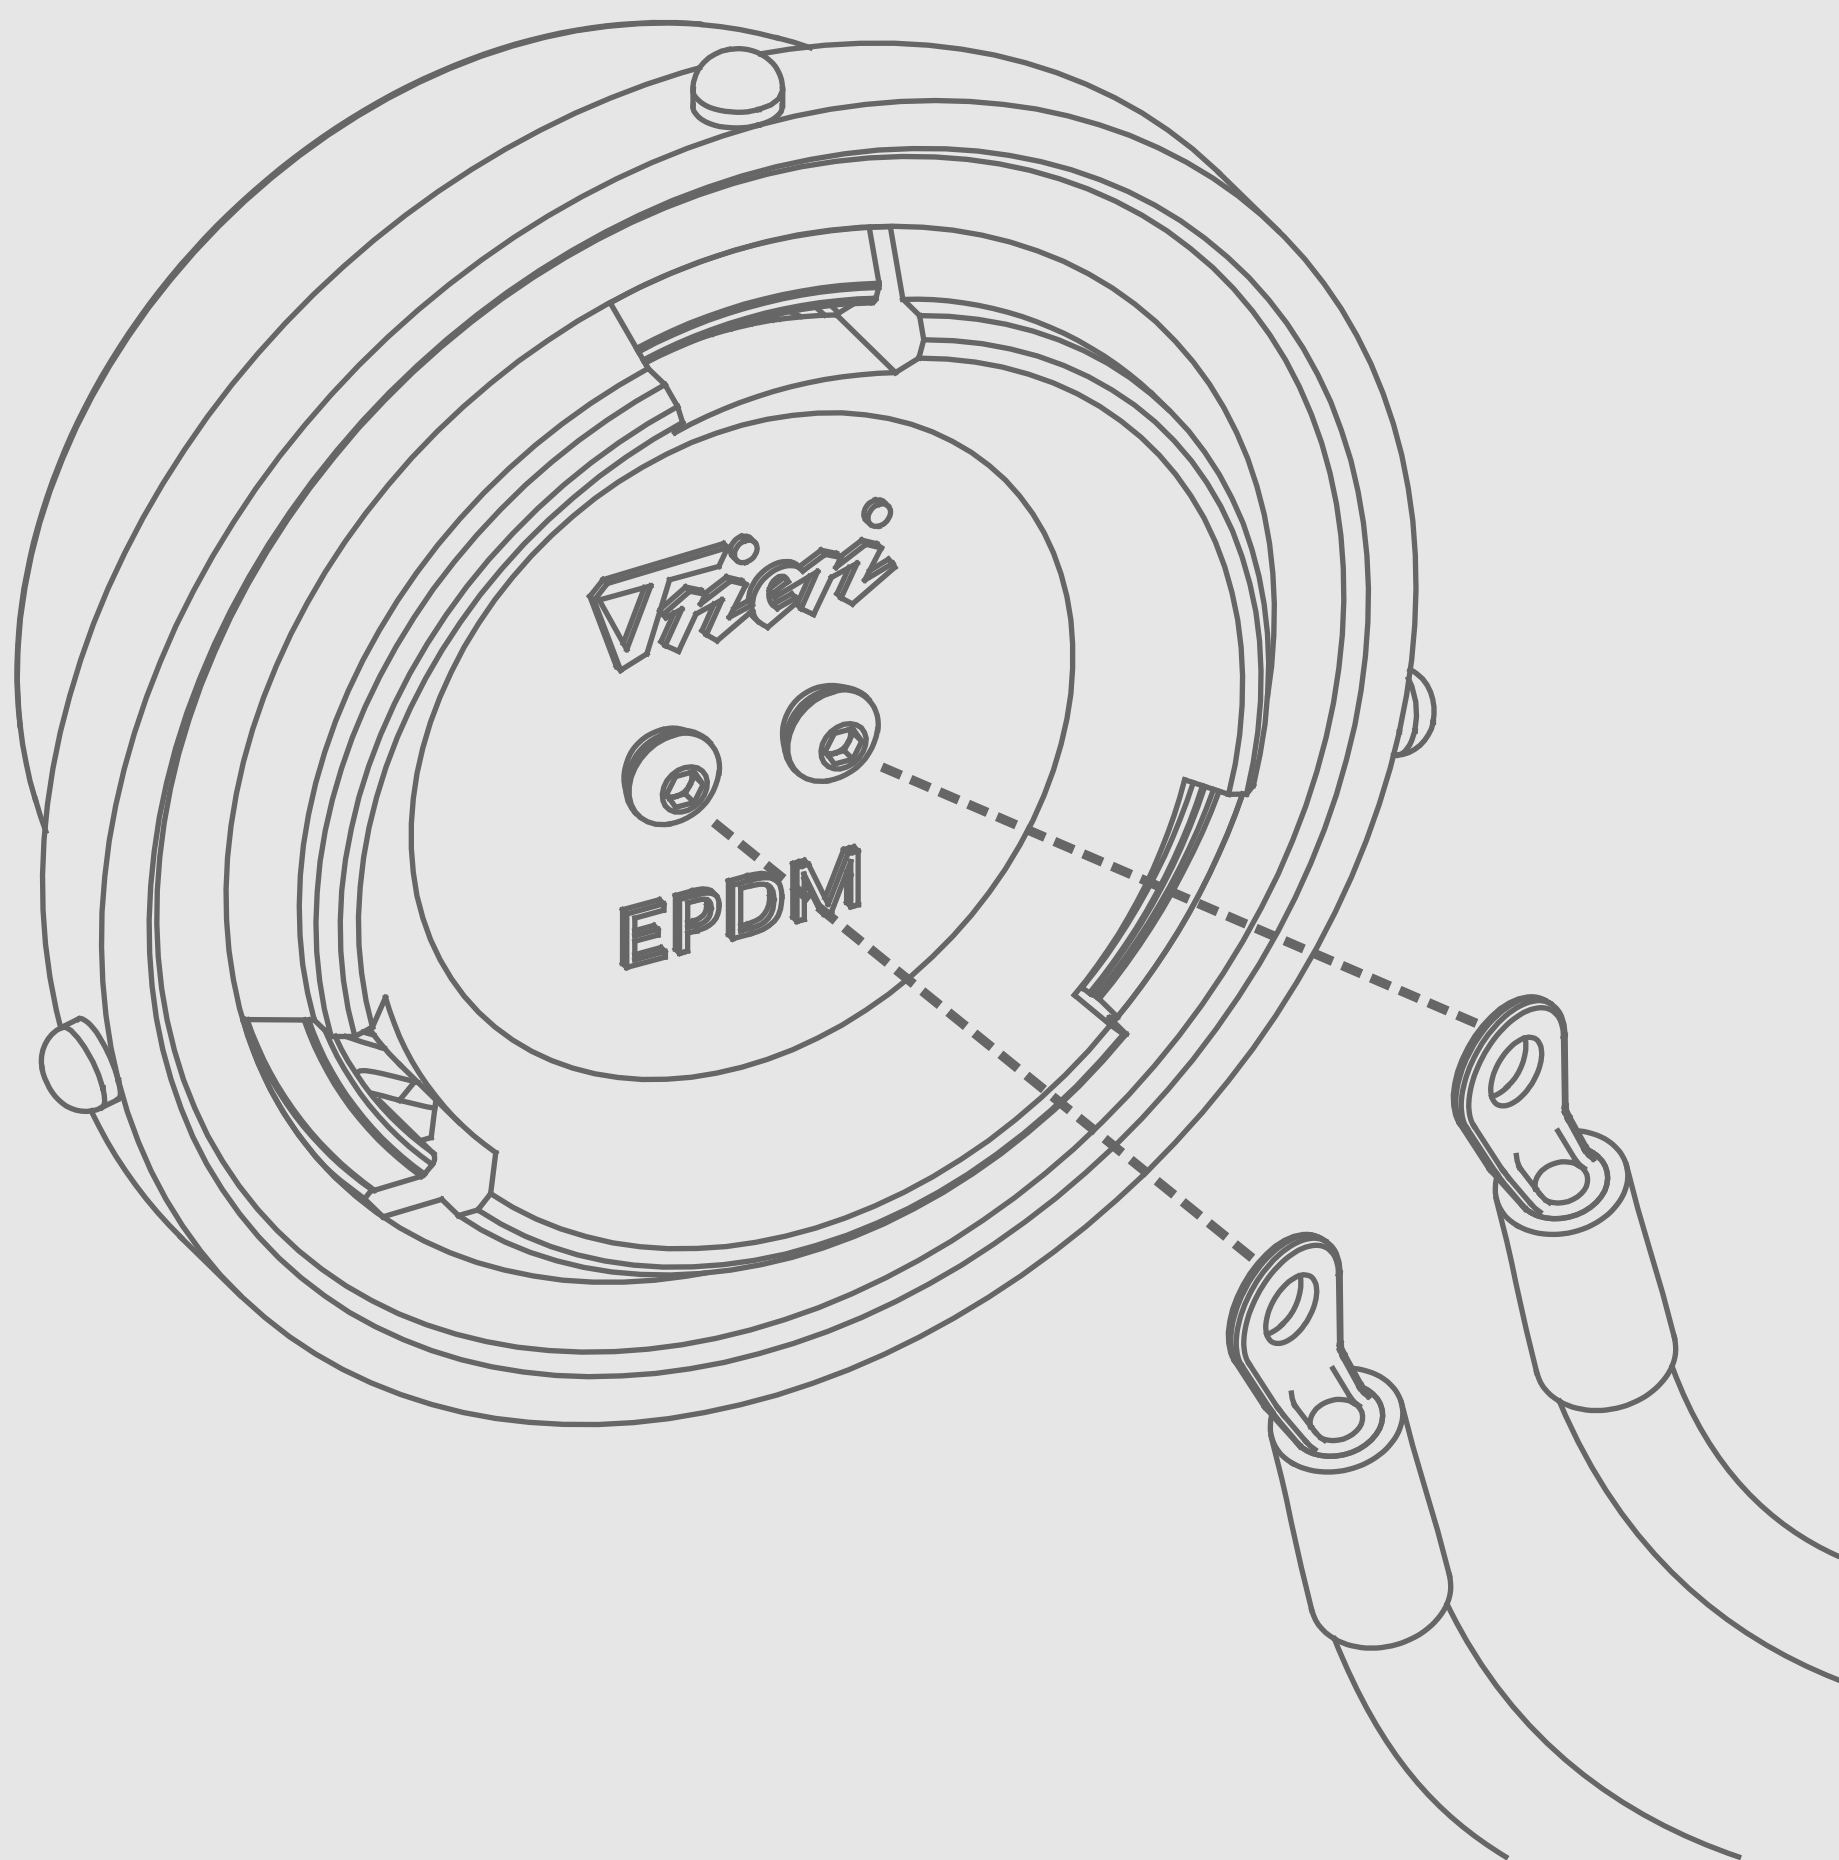

STEP #5

To connect the Trieri horn button, use provided wires to connect with m3 screws on the back of the horn assembly and on the other side of the wires to your vehicle horn connector. If you don't feel confident to do this stage on your own, please let it be done by your local certified electrician.


Frieri

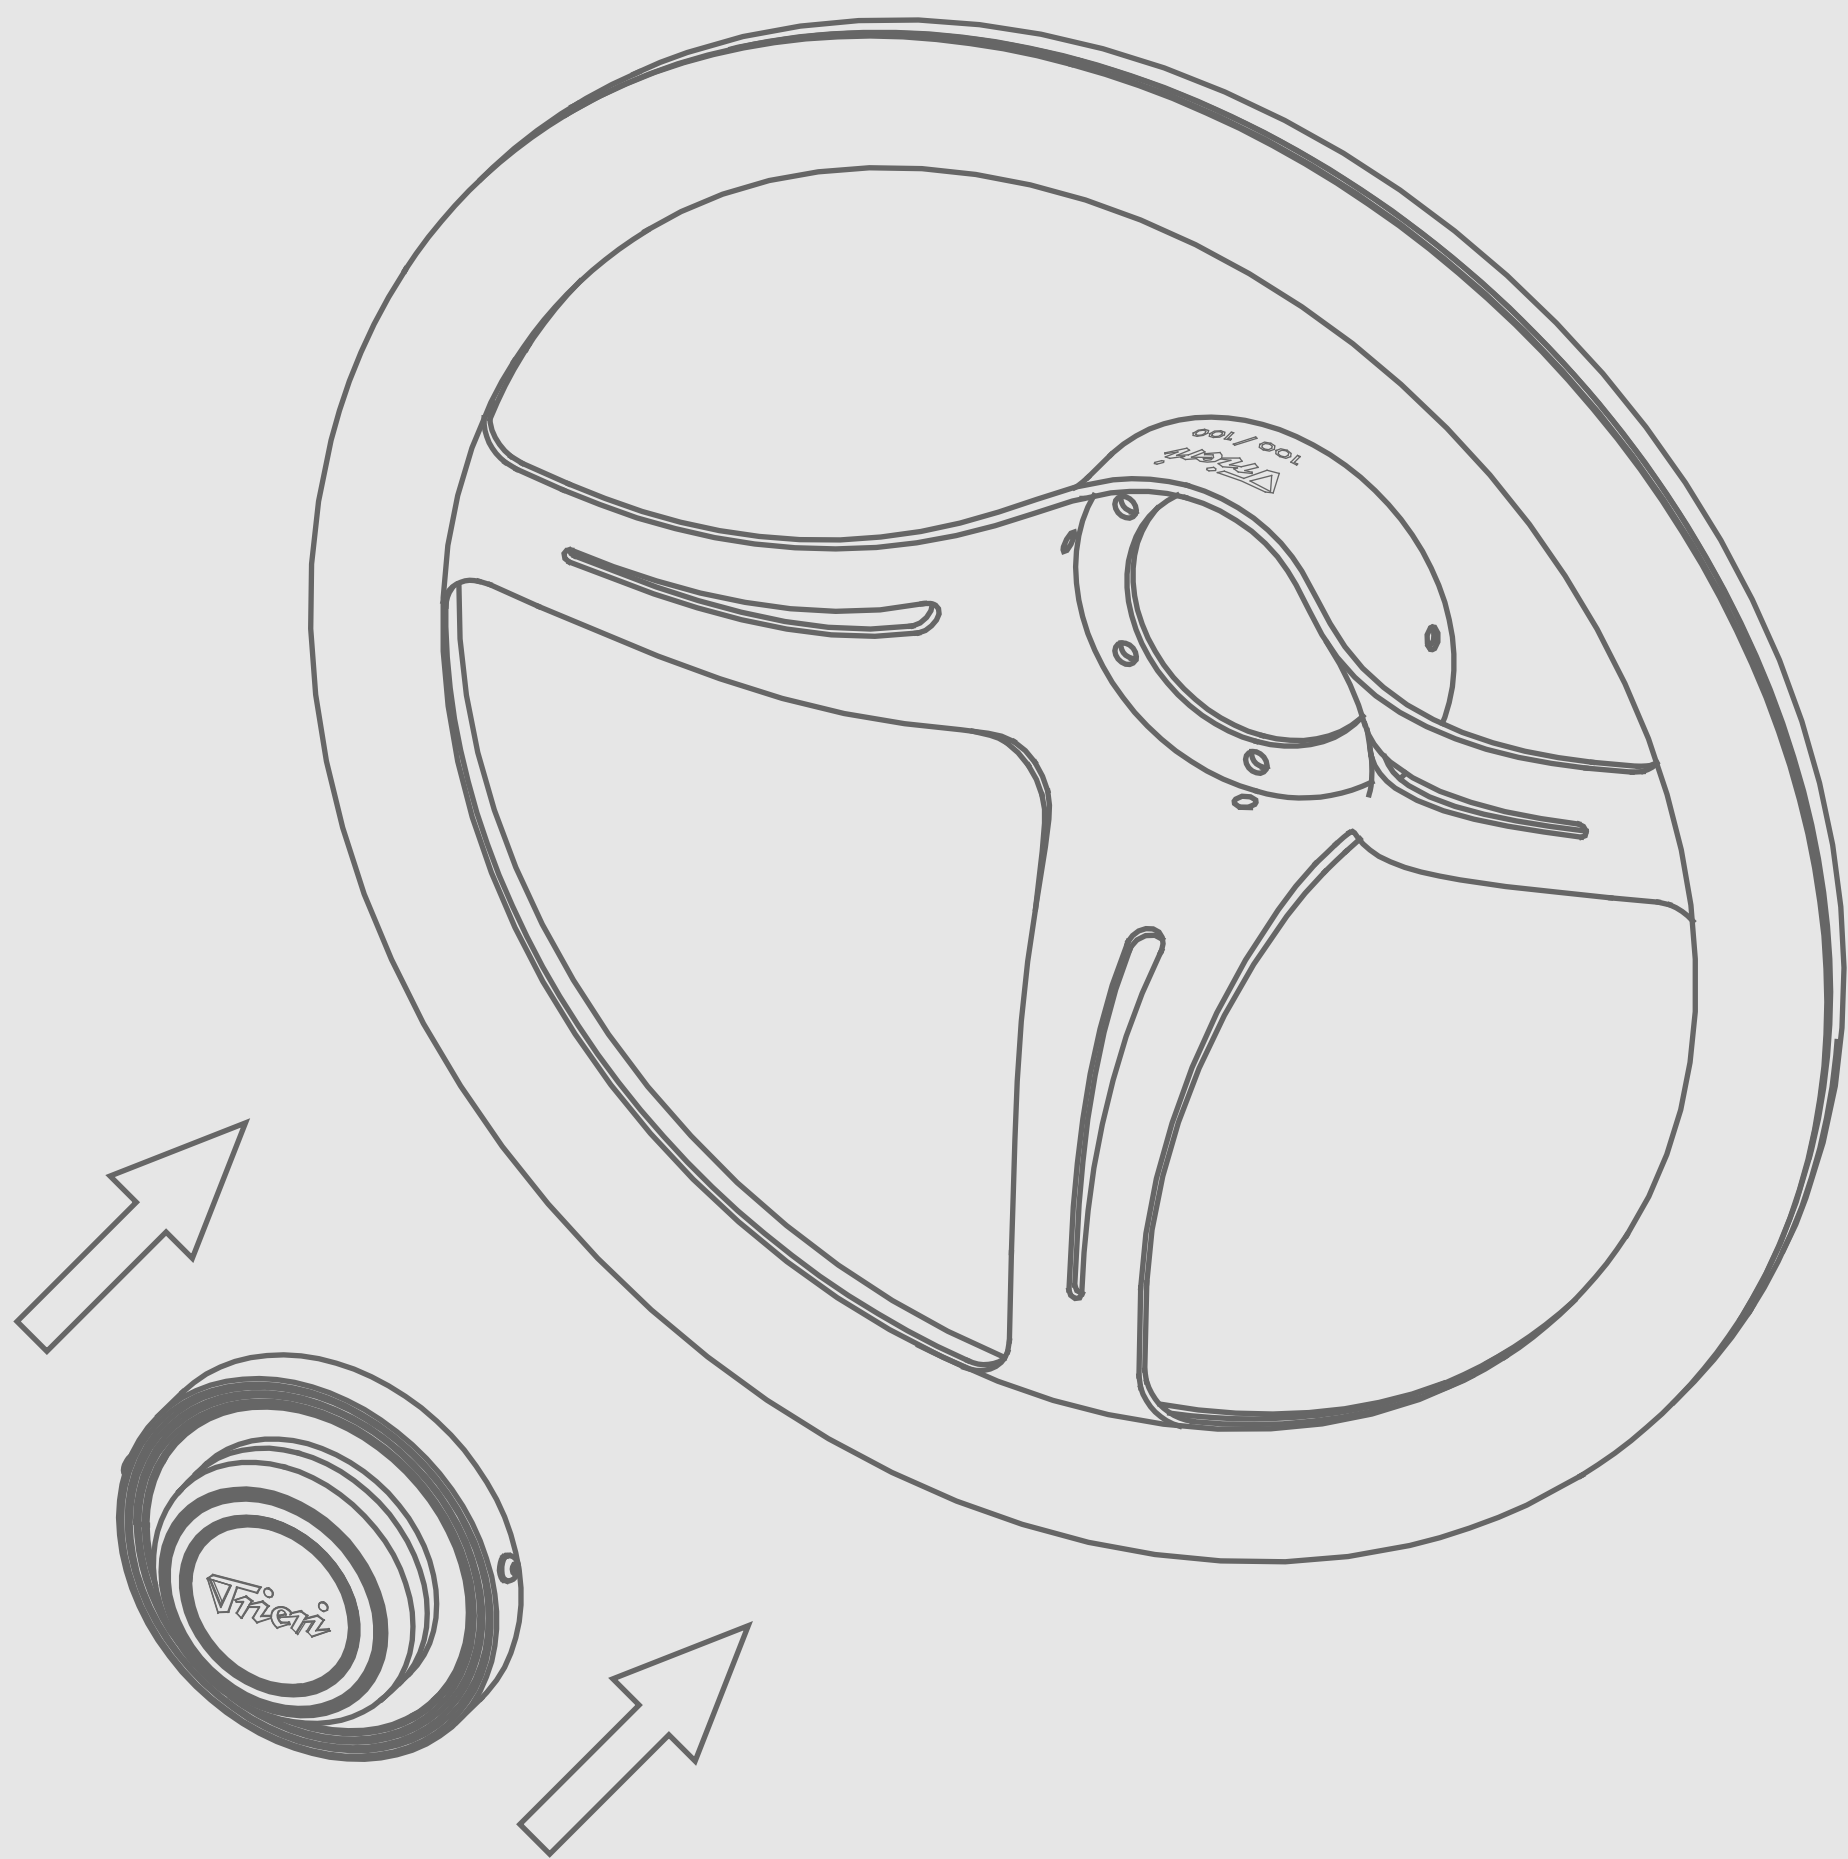

STEP #6

Return the horn assembly in the reverse order of pulling it out. First put the horn assembly without metal ring in the base, and make sure all three dots on the rubber base sat right in the holes of the steering wheel.

Frieri

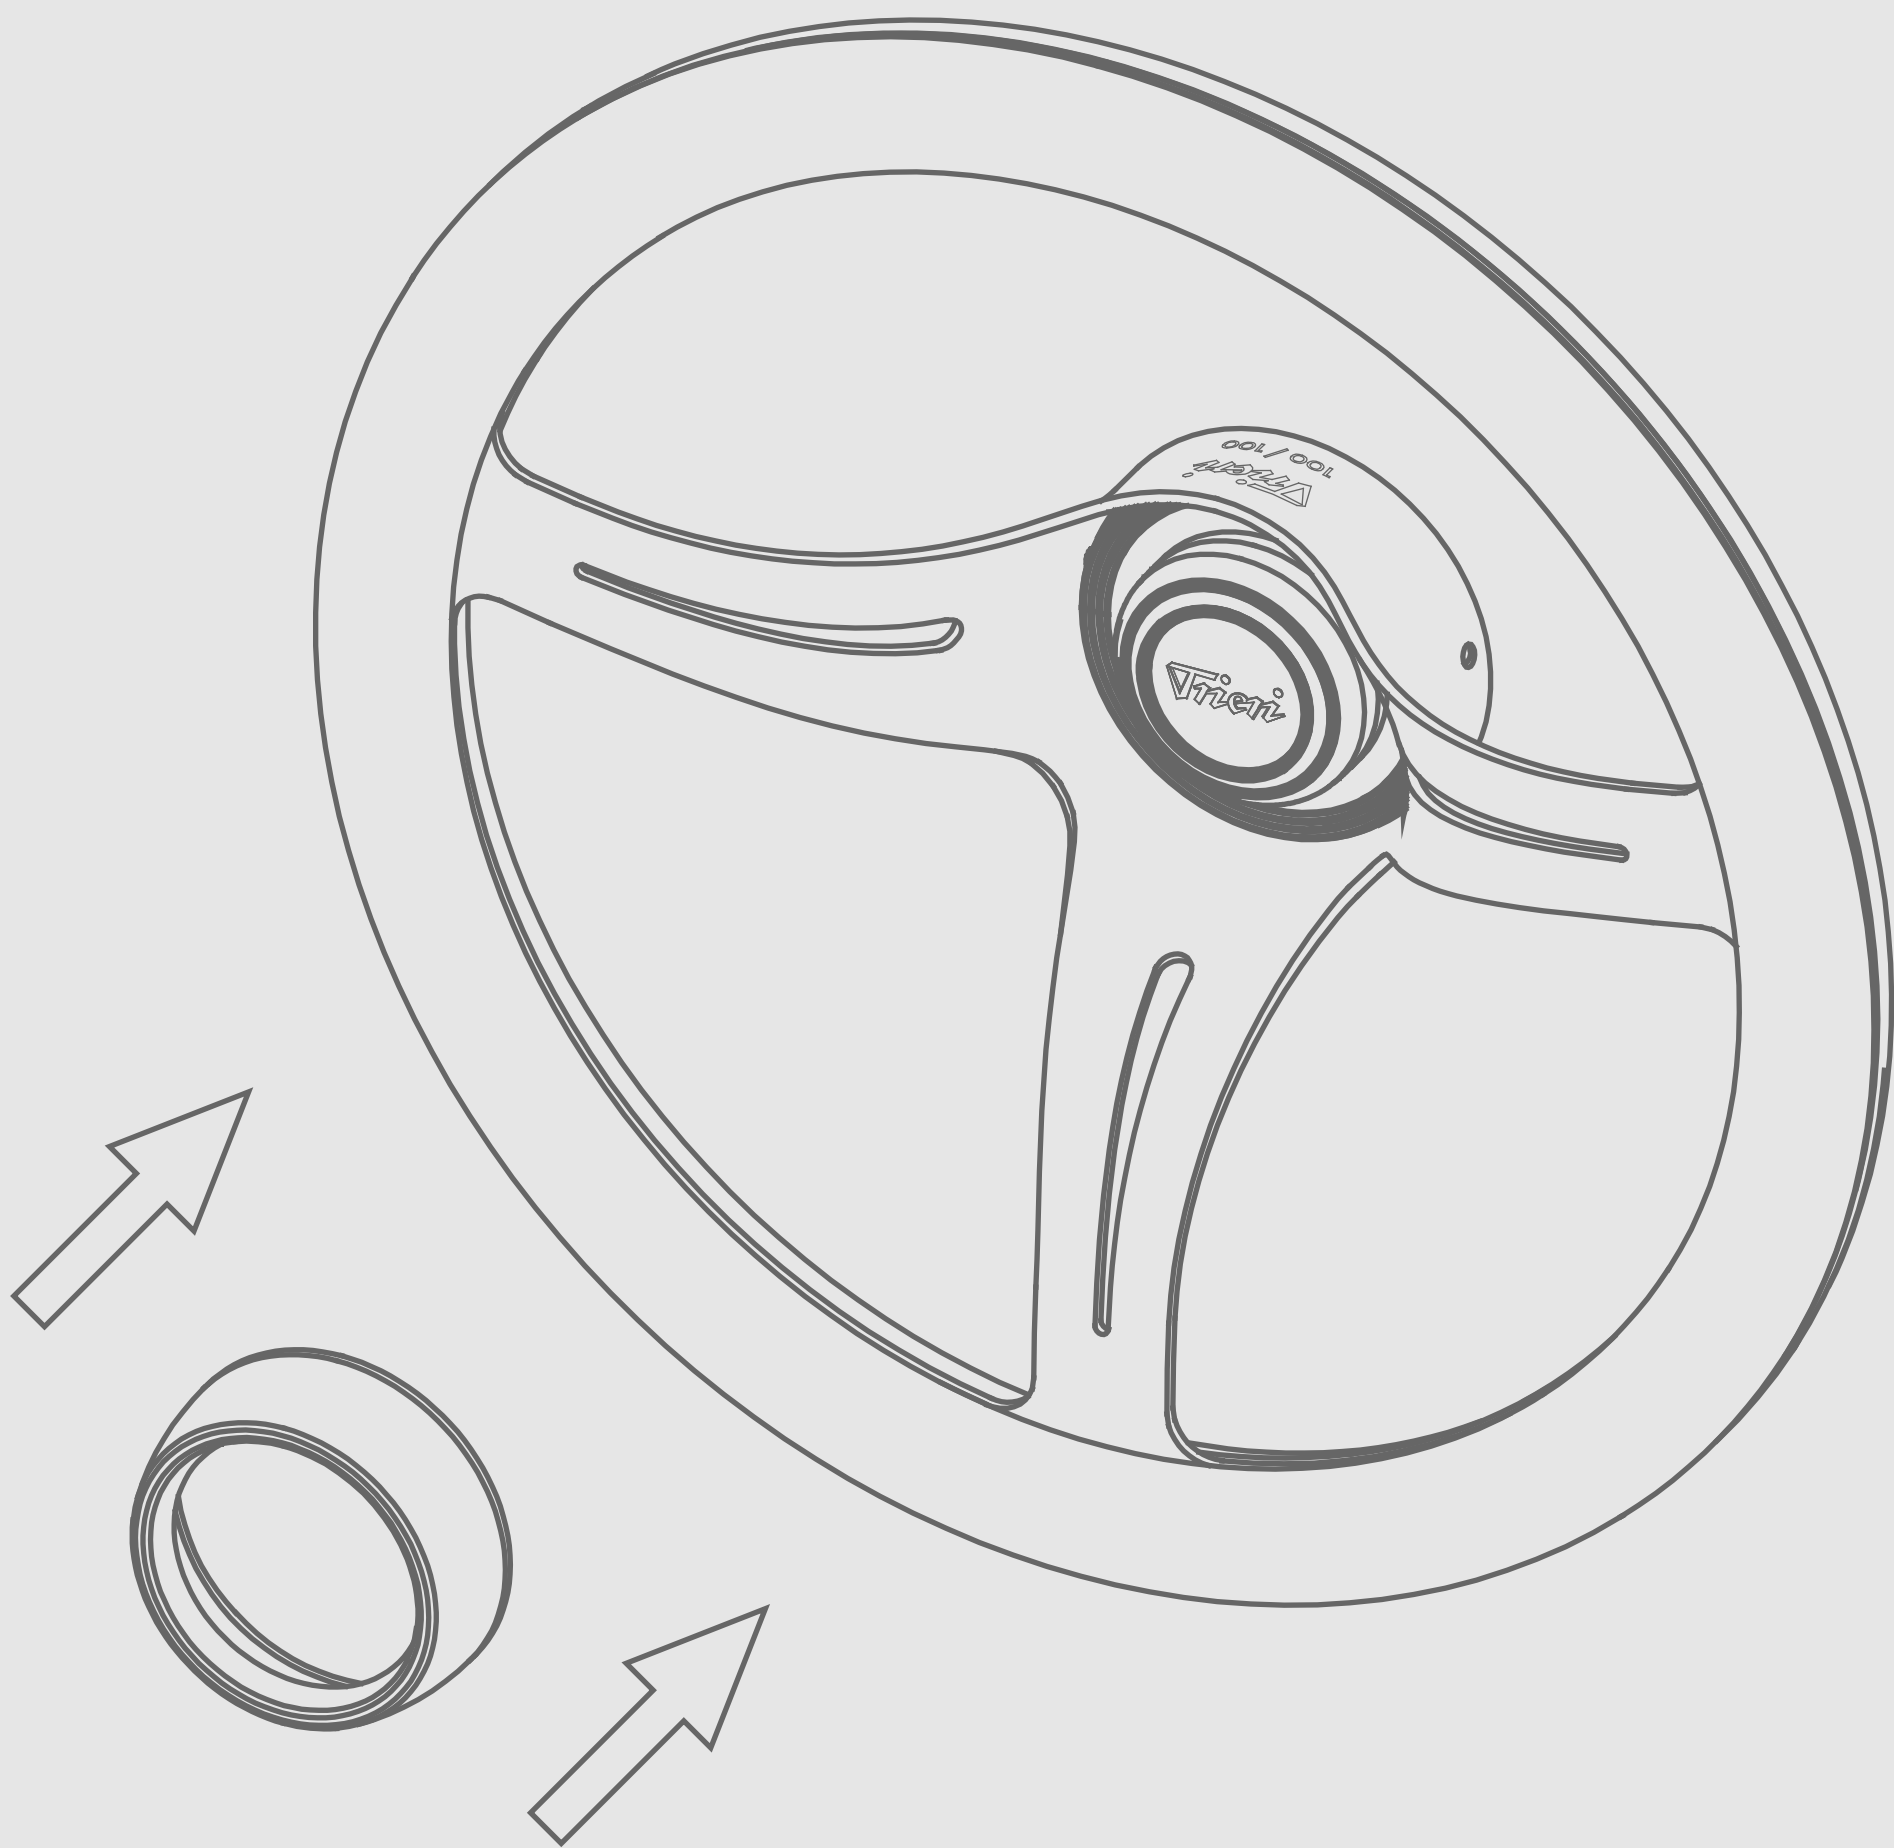

STEP #7

Return the metal horn ring back to the horn assembly. Make sure it sits right all around the rubber base. Press horn button few times to make sure everything set in its place.

Trieri



STEP #8

Congratulations, you are ready to use our first batch of Trieri innovative steering wheels. Hope you will enjoy using it as much as we did developing and manufacturing it. If you have any questions, suggestions or in need of help, don't hesitate to let us know. Contact us at info@trieri.hr